
Bluetooth Remote Controller Manual

1. Function Buttons



2. Manual

- <u>2-1. Pairing Method</u> *This pairing method should be finished under 15 seconds.
- 2-1-1. Prepare iPhone installed iOS7.
- 2-1-2. Download [LightBlue] APP from APP store.

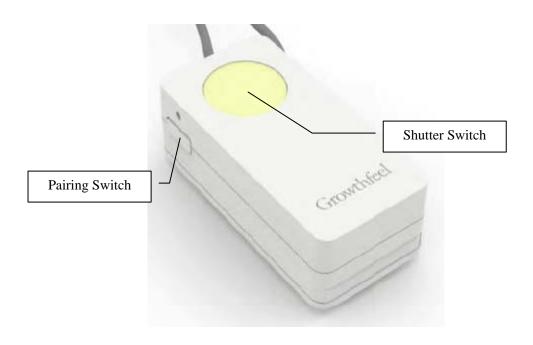

[LightBlue]

2-1-3. Open [LightBlue] APP and push the pairing switch on the bluetooth remote. The scanning information is showed on the APP. Select "GFRM-0002."



2-1-4. Select the lower service item.



2-1-5. Select the lower characteristic item.





2-1-7. Write some HEX code. For example, "ee" or "11."



2-1-8. Select to write the code. Push twice the button for sure.



These process should be done within 15 seconds.

2-2. Receive signals.

2-2-1. Select upper characteristic item.



2-2-2. Slect Start Notify button.



- 2-2-3. Push the pairing switch or the shutter switch on the Bluetooth remote.
- 2-2-5. Received signal is shown on the APP.



Pairing is disconnected automatically if any function switch on the Bluetooth remote has not been pushed for 2 minutes.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Jenesis Holdings Limited may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.